




Installation Tool

for inserts TR1650/51/60/61/70/71

Installation
Tools

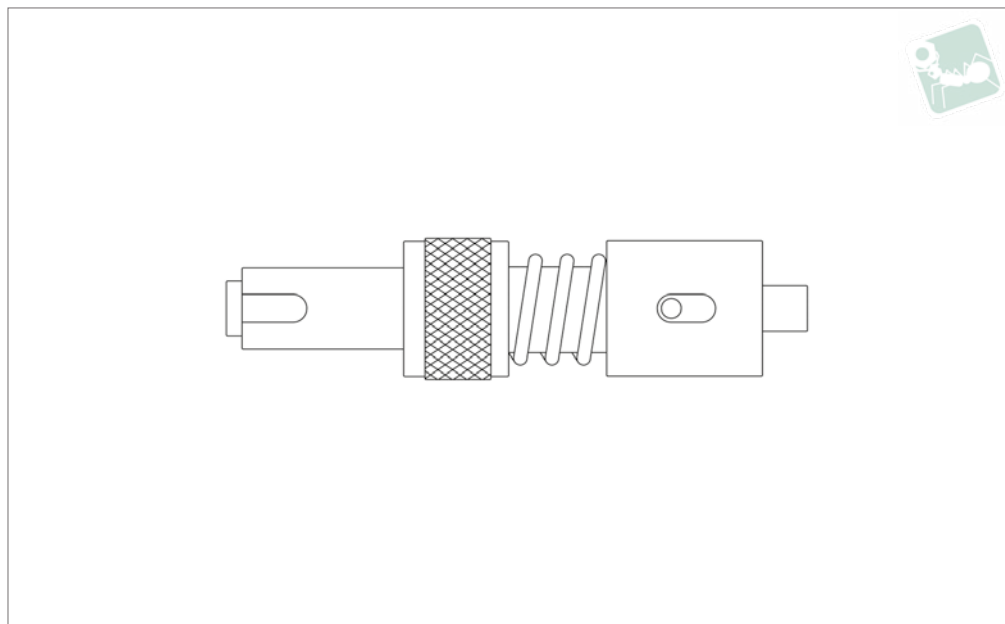

TR1700

INSTALLATION TOOLS

Material

Steel blackened.

Tips

For use with threaded inserts TR1650, TR1651, TR1660, TR1661, TR1670 and

TR1671.

Select installation tool of corresponding insert internal thread d_1 AND external thread d_2 .

If in doubt refer to data tables of insert

where „inst. tool ref“ is stated.

Important Notes
All dimensions in imperial.

Order No.	For insert of internal thread = d_1	For insert of external thread = d_2
TR1700.0830	2 - 56	8 - 32
TR1700.0840	4 - 40	10 - 32
TR1700.0850	6 - 32	12 - 28
TR1700.0860	8 - 32	1/4 - 28†