




# Installation Tool

for inserts TR1656/57/66/67



Installation  
Tools

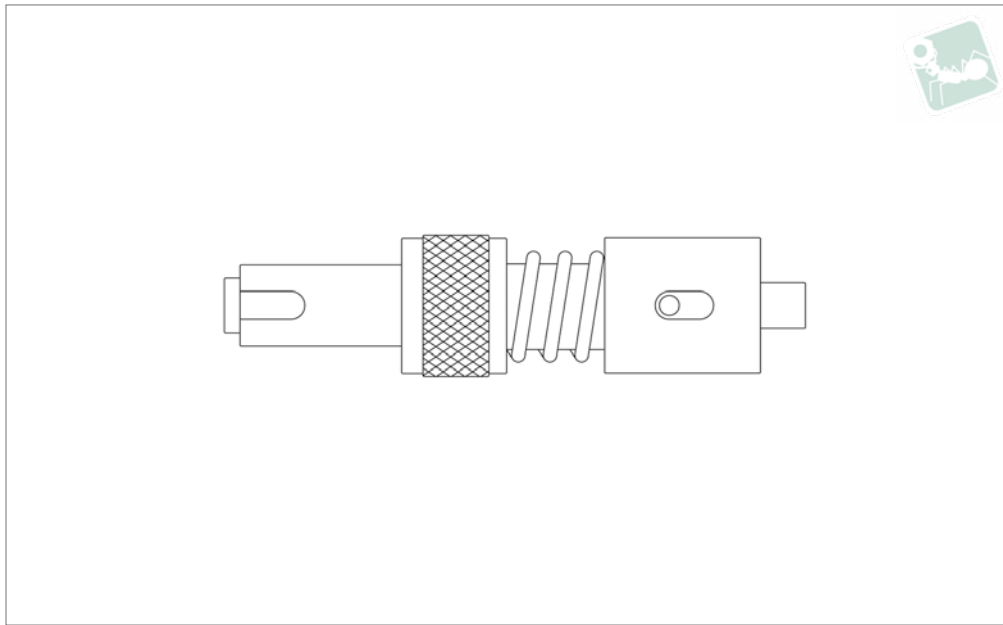

**TR1706**

INSTALLATION TOOLS

### Material

Steel blackened.

### Tips

For use with threaded inserts TR1656, TR1657, TR1666 and TR1667.

Select installation tool of corresponding insert internal thread  $d_1$  AND external thread  $d_2$ .  
If in doubt refer to data tables of insert where correct "Inst. tool ref" is stated.

### Important Notes

All dimensions in imperial.

Order No.	For insert of internal thread = $d_1$	For insert of external thread = $d_2$
TR1706.0330	10 - 24	7/16 - 14
TR1706.0331	10 - 32	7/16 - 14
TR1706.0340	1/4 - 20	1/2 - 13
TR1706.0341	1/4 - 28	1/2 - 13
TR1706.0350	5/16 - 18	9/16 - 12
TR1706.0351	5/16 - 24	9/16 - 12
TR1706.0360	3/8 - 16	5/8 - 11
TR1706.0361	3/8 - 24	5/8 - 11
TR1706.0370	7/16 - 14	11/16 - 11 NS
TR1706.0371	7/16 - 20	11/16 - 11 NS
TR1706.0380	1/2 - 13	13/16 - 16
TR1706.0381	1/2 - 20	13/16 - 16
TR1706.0390	9/16 - 12	7/8 - 14
TR1706.0391	9/16 - 18	7/8 - 14
TR1706.0400	5/8 - 11	1 - 12
TR1706.0401	5/8 - 18	1 - 12
TR1706.0410	3/4 - 10	1-1/4 - 12
TR1706.0411	3/4 - 16	1-1/4 - 12
TR1706.0420	7/8 - 9	1-3/8 - 12
TR1706.0421	7/8 - 14	1-3/8 - 12
TR1706.0430	1 - 8	1-1/2 - 12
TR1706.0431	1 - 12	1-1/2 - 12