




Installation Tool

for inserts TR1600/01/06/07

Installation
Tools

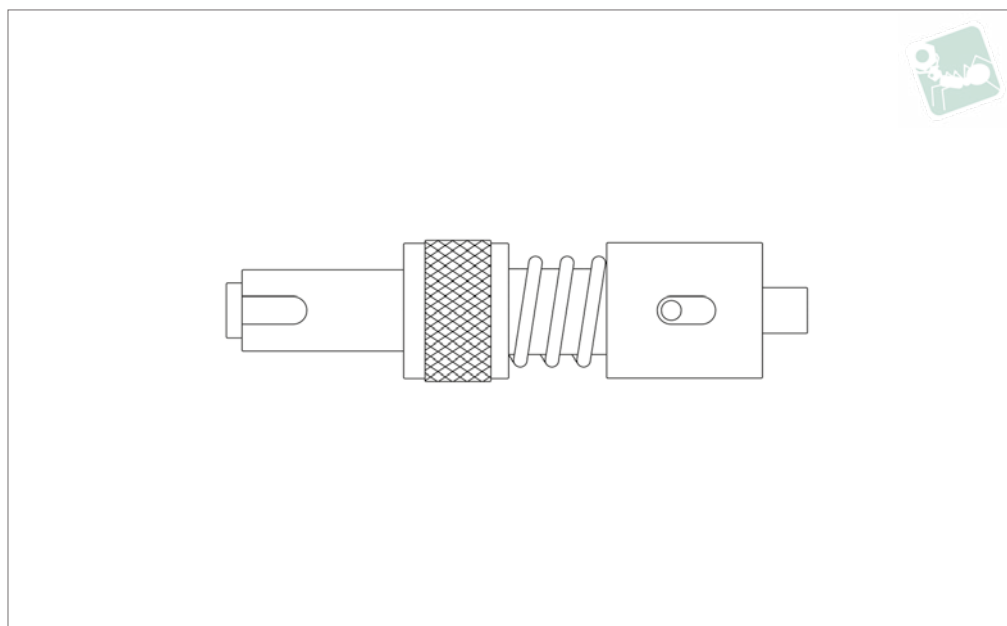

TR1710

INSTALLATION TOOLS

Material

Steel blackened.

TR1601, TR1606 and TR1607.

Select installation tool of corresponding insert internal thread d_1 AND external thread d_2 .

If in doubt refer to data tables of insert where correct "Inst. tool ref" is stated.

Tips

For use with threaded inserts TR1600,

Order No.	For insert of internal thread = d_1	For insert of external thread = d_2
TR1710.0820	M 2 x 0,4	M 4 x 0,7
TR1710.0830	M2,5 x 0,45	M 4,5 x 0,75
TR1710.0840	M 3 x 0,5	M 5 x 0,8
TR1710.0860	M 4 x 0,7	M 6 x 0,75