




Installation Tool

for inserts TR1602/03/08/09

Installation
Tools

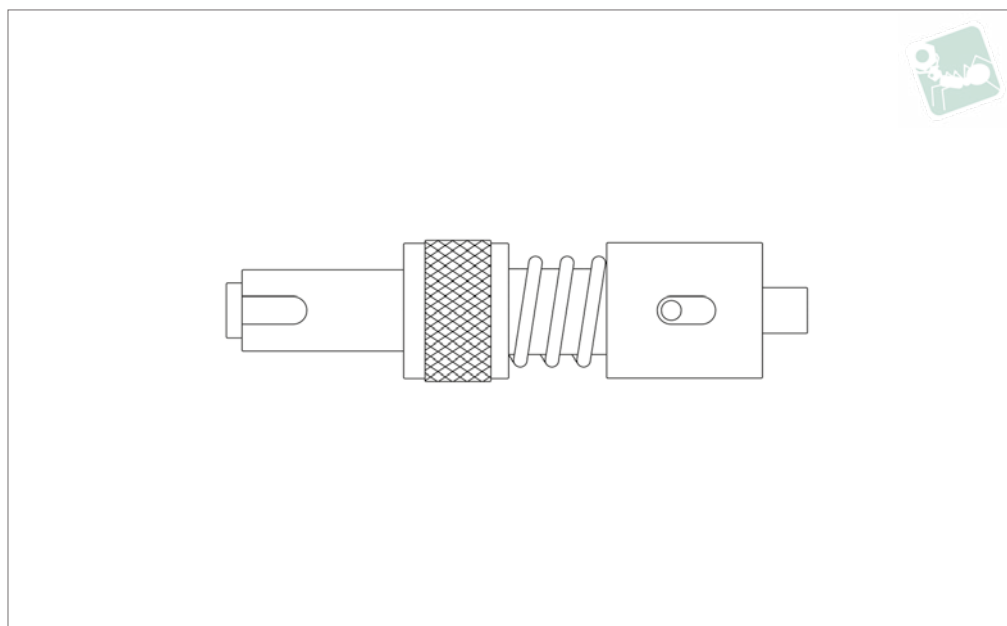

TR1712

INSTALLATION TOOLS

Material

Steel blackened.

TR1603, TR1608 and TR1609.

Select installation tool of corresponding insert internal thread d_1 AND external thread d_2 .

If in doubt refer to data tables of insert where correct "Inst. tool ref" is stated.

Tips

For use with threaded inserts TR1602.

Order No.	For insert of internal thread = d_1	For insert of external thread = d_2
TR1712.0510	M 5 x 0,8/M 5 x 0,5	M 8 x 1,25
TR1712.0520	M 6 x 1,0/M 6 x 0,75	M 10 x 1,25
TR1712.0530	M 8 x 1,25/M 8 1,0	M 12 x 1,25
TR1712.0550	M 10 x 1,5/M 10 x 1,25	M 14 x 1,5
TR1712.0560	M 12 x 1,75/M 12 x 1,25	M 16 x 1,5