




Installation Tool

for inserts TR1680 and TR1681

Installation
Tools

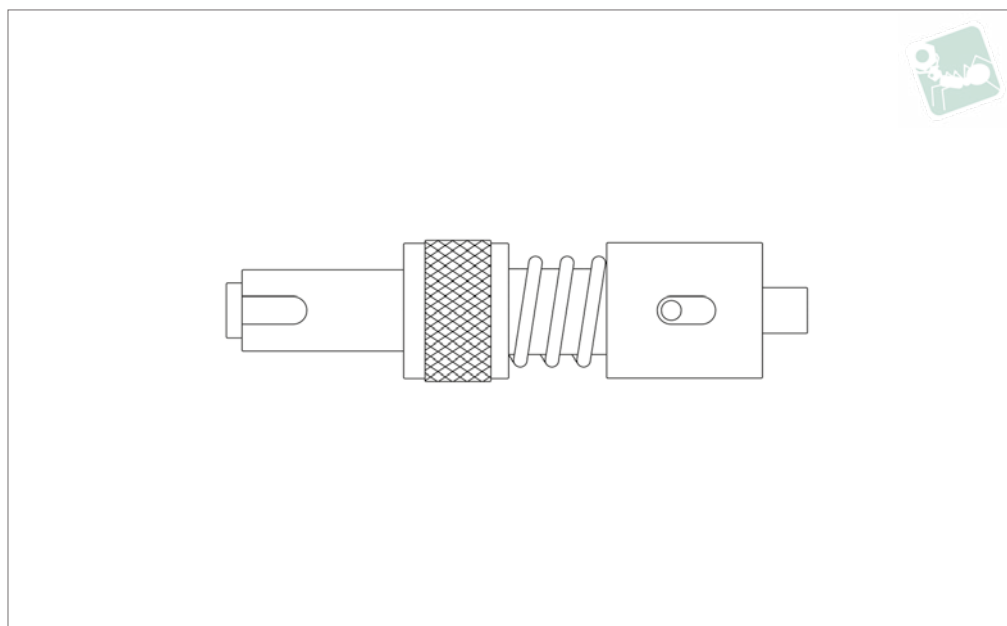

TR1720

INSTALLATION TOOLS

Material

Steel blackened.

Tips

For use with threaded insert TR1680 and TR1681.

Select installation tool of corresponding insert internal thread d_1 AND external thread d_2 .

If in doubt refer to data tables of insert where correct "Inst. tool ref" is stated.

Important Notes

All dimensions in imperial.

Order No.	For insert of internal thread = d_1	For insert of external thread = d_2
TR1720.0830	2 - 56	1/4 - 28†
TR1720.0840	4 - 40	5/16 - 24
TR1720.0850	6 - 32	3/8 - 24
TR1720.0860	8 - 32	3/8 - 24