


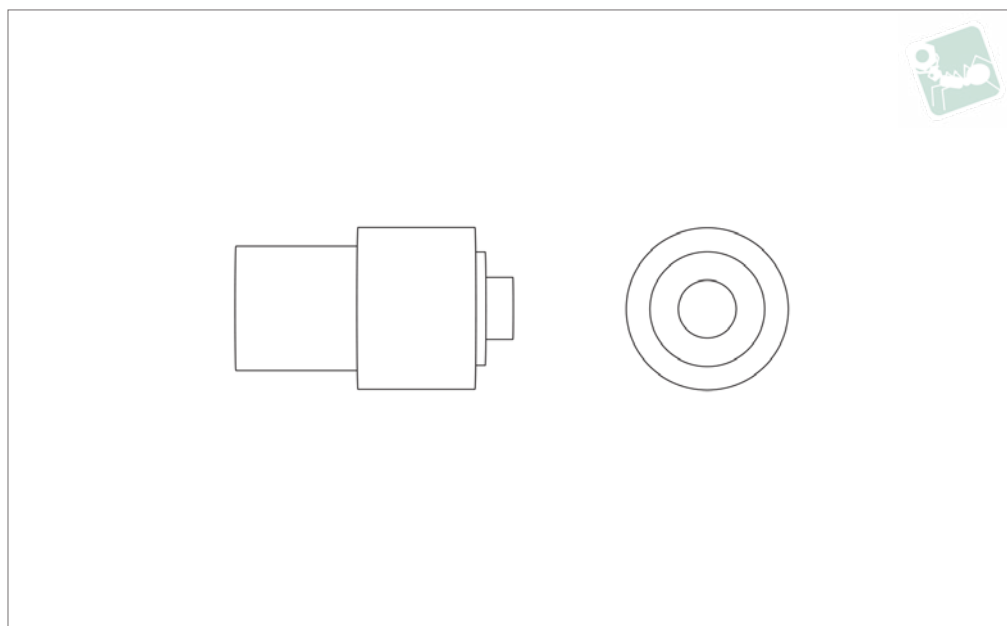

Installation Tool

for inserts TR1685 and TR1686



TR1725

INSTALLATION TOOLS

Material

Steel blackened.

Tips

For use with threaded insert TR1685 and TR1686.

Select installation tool of corresponding insert internal thread d_1 AND external thread d_2 .

If in doubt refer to data tables of insert where correct "Inst. tool ref" is stated.

Important Notes

All dimensions in imperial.

Order No.	For insert of internal thread = d_1	For insert of external thread = d_2
TR1725.0010	10 - 24/ 10 - 32	7/16 - 20
TR1725.0020	1/4 - 20/ 1/4 - 28	1/2 - 20
TR1725.0030	5/16 - 18/ 5/16 - 24	5/8 - 18
TR1725.0040	3/8 - 16/ 3/8 - 24	3/4 - 16
TR1725.0050	7/16 - 14/ 7/16 - 20	7/8 - 14
TR1725.0060	1/2 - 13/ 1/2 - 20	1" - 12